

Bedienungsanleitung für Connect Funktion


Strata lead 90 / Strata tail stop

Pairing Modus

Um den Scheinwerfer mit dem Rücklicht zu verbinden, muss der Schalter des Scheinwerfers im ausgeschalteten Zustand für 3 Sekunden gedrückt werden. Dadurch gelangt der Scheinwerfer in den Pairing Modus, erkennbar dadurch, dass die Batterieladestandsanzeige des Rücklichts abwechselnd aufleuchtet. Sobald dies erfolgt ist, schaltet man das Rücklicht ein und aktiviert den Pairing Modus. Hierbei drückt man den Schalter so lange, bis das Rücklicht dreimal aufblinkt. Nun muss der Schalter des Rücklichts so lange gedrückt werden, bis es sich mit dem Scheinwerfer verbindet. Ist die Verbindung zustande gekommen, erlischt die Batterieladestandsanzeige des Rücklichts. Nach Einschalten des Scheinwerfers kann man in der Batterieladestandsanzeige auch den Ladezustand des Rücklichts erkennen.

Hinweis:

Wenn sich die Verbindung des Scheinwerfers und des Rücklichtes trennt, z.B. dadurch, dass das Rücklicht entladen ist oder außerhalb der Reichweite ist, schaltet sich der Scheinwerfer wieder für 60 Sekunden in den Pairing Modus. Wenn in dieser Zeit das Rücklicht nicht gefunden wurde, schaltet sich die Pairing Funktion aus. Der Pairing Prozess muss daraufhin erneut durchgeführt werden.

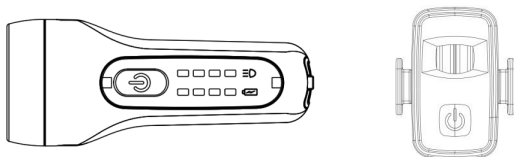

Strata lead 90 nur kompatibel mit Strata tail stop

User manual for connect function

Strata lead 90 / Strata tail stop

Pairing mode


To pair the headlight with the rear light, press and hold the headlight switch for 3 seconds while the headlight is off.

This puts the headlight into pairing mode, which is indicated by the rear light's battery level indicator flashing alternately.

Once this is done, turn on the taillight to activate pairing mode. To do this, press and hold the switch until the rear light flashes three times. Now press and hold the rear light switch until it connects to the headlight. Once the connection is established, the rear light's battery level indicator turns off. After turning on the headlight, you can also see the rear light's charge level in the battery level indicator.

Note:

If the connection between the headlight and the rear light is lost, e.g., because the rear light is discharged or out of range, the headlight will switch back to pairing mode for 60 seconds. If the rear light is not found during this time, the pairing function turns off. The pairing process must then be performed again.

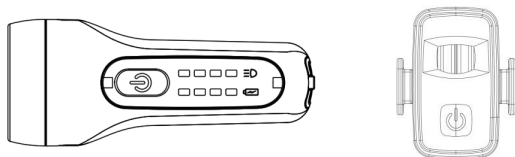

Strata lead 90 is only compatible with Strata tail stop