

PIASTRA SPECIFICA - SPECIFIC PLATE  
 PLATINE SPECIFIQUE - SPEZIFISCHE PLATTE - PARRILLA ESPECÍFICA

# BMW F800GS 2008-2010

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE



**1**  
**SUPPORTO**  
 SUPPORT  
 SUPPORT  
 HALTERUNG  
 SOPORTE

**Q.TY n.1**




**2**  
**VITE TEF M8x60mm**  
 SCREW M8x60mm  
 VIS M8x60mm  
 SCHRAUBE M8x60mm  
 TORNILLO M8x60mm

**Q.TY n.2**




**3**  
**VITE TEF M8x55mm**  
 SCREW M8x55mm  
 VIS M8x55mm  
 SCHRAUBE M8x55mm  
 TORNILLO M8x55mm

**Q.TY n.2**

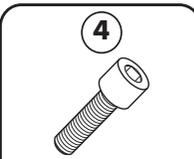


**4**  
**VITE TCEI M6x25mm**  
 SCREW  
 VIS  
 SCHRAUBE  
 TORNILLO

**Q.TY n.4**

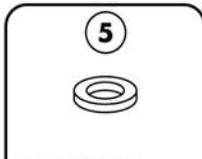


**5**  
**RONDELLA Ø6mm**  
 WASHER  
 RONDELLE Ø6mm  
 SCHEIBE Ø6mm  
 ARANDELA Ø6mm

**Q.TY n.4**

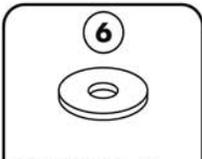

**6**  
**RONDELLA Ø6x20mm**  
 WASHER  
 RONDELLE  
 SCHEIBE  
 ARANDELA

**Q.TY n.4**

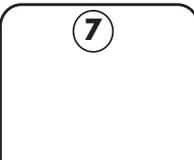

**7**  
**PIASTRA MONOLOCK**  
 PLATE  
 PLATINE  
 PLATTE  
 PARRILLA

**Q.TY n.1**




**8**  
**DISTANZIALE Ø16x32mm**  
**Foro Ø8,5mm, V696**  
 SPACER  
 ENTRETOISE  
 DISTANZSTUECK  
 DISTANCIADOR

**Q.TY n.2**



**9**  
**DADO A.B. M6**  
**FLANGIATO**  
 BOLT M6  
 ECROU M6  
 MUTTER M6  
 TUERCA M6

**Q.TY n.4**

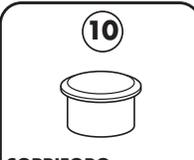

**10**  
**COPRIFORO**  
**Z621**  
 BOLT CAP  
 CACHE TROU  
 STOPSLOCK  
 TAPA AGUJERO

**Q.TY n.6**

