



# SCHLIESSEN LOCKING

#01

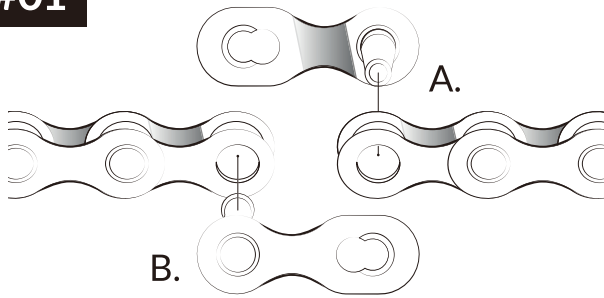


Insert both (A) and (B) of **Sigma+ Connector** into ends of the chain.

#04

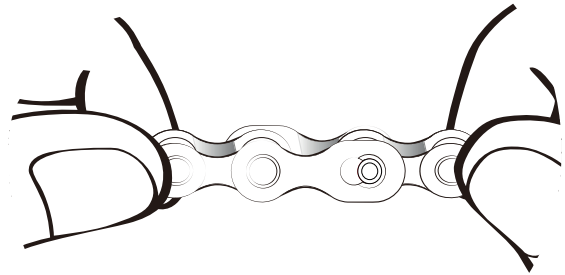


Check **Sigma+ Connector** to ensure no stiff links

#02

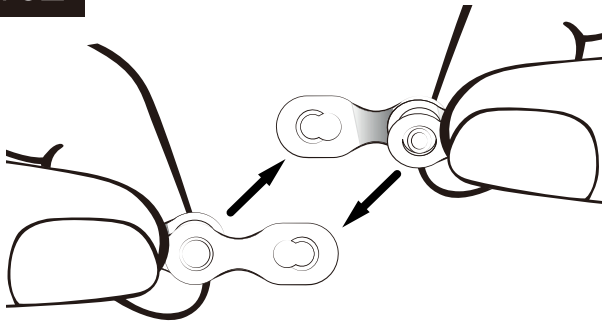


Buckle both halves of **Sigma+ Connector** together.

# ÖFFNEN UNLOCKING

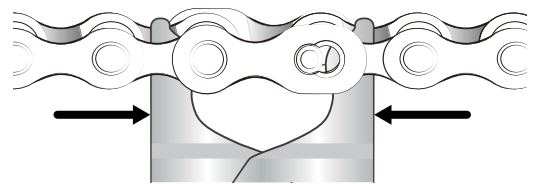

Remove **Sigma+ Connector** by tool.

#03

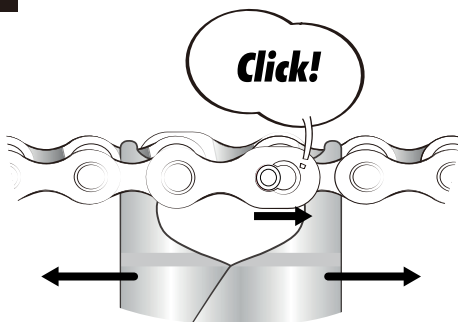

Use (a) tool or (b) pedaling power to lock **Sigma+ Connector**.



WE RECOMMEND  
CONTEC MULTI I/O CHAIN TOOL

WIR EMPFEHLEN DAS  
CONTEC MULTI I/O WERKZEUG