



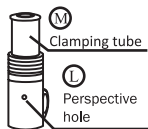

Users manual: HEADS-UP AND HEADS-UP DLX

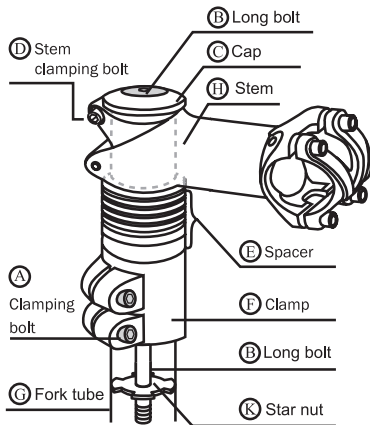

Warning:

Always check carefully if all parts are securely tightened in place before every riding or after assembly.

Service
Hermann Hartje KG
Deichstr. 120-122
27318 Hoya

Tel: 04251/811-0

contec-parts.com
info@contec-parts.de


Installation of HEADS-UP and HEADS-UP DLX



1. Remove top cap(C), clamping bolts(A), spacer (E), and long bolt(B)




2. Place the clamp(F) onto the fork tube(G) with the inside fork tube can be seen through from the perspective hole(L).

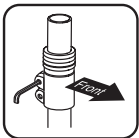


3. Pre-tighten the clamping bolts(A) to secure the HEADS-UP onto the fork tube(G).




4. Place the stem(H) onto clamping tube(M). Align HEADS-UP , stem(H) and wheel in line, and then pre-tighten the clamping bolts of stem(D).

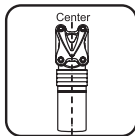

5. Make sure the stem(H), HEADS-UP , at the center position and in line with the wheel and fork tube(G).

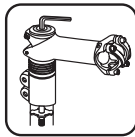

6. Place long bolt(B) onto the top of HEADS-UP. Gradually tighten up the long bolt(B) to secure HEADS-UP onto the fork tube(G). **No movement between the product and fork tube (G) is allowed!**

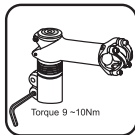

7. Gradually tighten up the clamping bolts of stem(D) and the HEADS-UP within torque 90~100 kgf-cm (9~10Nm).