



Dispensing Systems

Dispenser for 1 L collapsible bottles



PGP VARIOMAT PRO TOUCHLESS

Touch-free plastic dispenser for 1 L collapsible bottles.

- dispenser made of plastic
- touch-free operation
- completely hygienic system
- sturdy design
- very good residual emptying
- optionally lockable
- capacitive sensor: only reacts to the hand
- no unintentional activation when walking by
- long battery life
- available in black or white

Your Partner for
Professional Skin Care



PGP VARIOMAT PRO TOUCHLESS



PRODUCT PROPERTIES

- dispenser made of plastic
- touch-free operation
- completely hygienic system as there is no contact between product and dispenser
- sturdy design
- very good residual emptying
- optionally lockable
- capacitive sensor: only reacts to the hand and therefore also works in poor lighting conditions or with very dirty hands
- no unintentional activation when walking by
- long battery life
- IPX2 – protection against dripping water
- available in black or white

PACKAGING

The VARIOMAT PRO TOUCHLESS plastic dispenser is available as single unit in a cardboard box, incl. wall-mounting material. Batteries are not included in the delivery.

To the downloads and videos:
www.pgp-hautschutz.de/en/downloads/product-application




APPLICATION

The electronic dispenser has been designed and manufactured for automatic dispensing of a single dose of skin protection, skin cleansing, skin care or disinfectant product in 1 L collapsible bottles manufactured by Peter Greven Physiaderm GmbH whenever the user's hand approaches the capacitive sensor.

DIMENSIONS

Width: approx. 124 mm, Height: approx. 295 mm / approx. 330 mm with key, Depth: approx. 134 mm

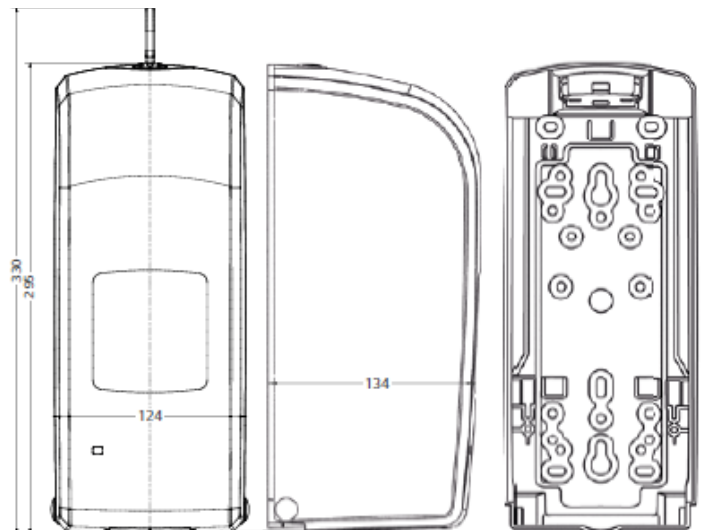

Subject to technical changes
Dimensions in mm

TECHNICAL DATA

Dispenser with capacitive sensor; operated with four LR20 batteries (type D)

Quiescent current: < 2 mA

Material used:

- Back plate: PS
- Cover, window, lock, battery case: ABS
- Electronic mechanism: plastic and metal

Tare weight: 0.900 kg

Locking with button, optionally with key



PGP

VARIOMAT PRO TOUCHLESS

GENERAL SAFETY INSTRUCTIONS

- This device can be used by children aged 8 and above as well as by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are given supervision or instructions concerning safe use of the device and if they understand associated risks.
- Cleaning and use must not be carried out by children without supervision.
- Children must not play with the device.
- The device is maintenance-free.

PLEASE NOTE

The manufacturer is not responsible for accidents that cause damage to property, people or the device itself through improper use of the dispenser.

Please read the instructions carefully before use and assembly.

INSERTING THE BATTERIES

Open the battery case and insert four high-quality LR20 batteries (type D). These are not included in the delivery. Close the battery case.

ADDITIONAL SAFETY INSTRUCTIONS FOR BATTERIES

- Non-rechargeable batteries must not be recharged.
- Rechargeable batteries must be removed from the device before recharging.
- Different types of batteries or new and used batteries must not be mixed.
- The batteries must be inserted with the correct polarity.
- Used batteries must be removed from the device and disposed of safely.
- If the device is stored unused for a longer period of time, the batteries must be removed.
- The power supply terminals must not be short-circuited.

To the assembly instructions:

www.pgp-hautschutz.de/en/expertise-center/assembly-instructions



WEEE Reg. No. (Germany)
DE53122534

VARIOMAT PRO TOUCHLESS WHITE
Art. No. 14394001
📦 1 piece

VARIOMAT PRO TOUCHLESS BLACK
Art. No. 14394003
📦 1 piece

Our information and recommendations correspond to our current state of experience. They are not binding and do neither imply any warranty nor do they establish a contractual relationship. We reserve the right of modifications in line with technological progress and further development of our products. We request our customers to conduct their own tests on our products for fitness for purpose. Version: 06/2026

Peter Greven Physiaderm GmbH
Procter-&-Gamble-Straße 26
D-53881 Euskirchen (Germany)

Phone: +49 (0)2251 77617-30
info@pgp-skincare.com
www.pgp-skincare.com

Your Partner for
Professional Skin Care

